

## How to Set Up the Roku with your TV

In order for the Roku to work with your TV you must have a TV with an HDMI port (usually located on the back or the side of your TV). You will also need a high speed Internet connection and have WIFI in your home.

This Roku is logged in to Netflix. Do not log out of the Netflix account. You will not be able to access the Netflix account if you log off.

The Roku that you have checked out from the library has the following:

- Roku Streaming Stick



- USB cord and charger to supply power to the stick



- Remote control



## Set Up the Roku

1. Plug the USB cord into the charger and plug it into a nearby outlet.  
**OR** plug in the USB cord into a USB port located on the TV.



2. Plug the smaller end of the USB cord into the back of the Roku streaming stick.
3. Plug the Roku streaming stick into a HDMI port on your TV.  
Note the number of the HDMI port you are using on your TV

### **Once the Roku streaming stick is receiving power and is plugged into your TV, continue by...**

1. Turn on your TV with your TV remote.
2. Take your TV remote and look for the INPUT button or SOURCE button.
3. Select INPUT or SOURCE.
4. Look for the number of the HDMI port that you used to plug in the Roku streaming stick and select that one using your TV remote.

### **The Roku Home screen should come up on your TV.**

1. Take the Roku remote and scroll down to SETTINGS, using the arrows on the remote to highlight SETTINGS. Once SETTINGS is highlighted, press OK.

**The arrows on the remote let you move to the different options listed on the screen. You can move the cursor right, left, up or down with the arrows on the remote.**

2. Under the SETTINGS menu, look for the word NETWORK.
3. Use the down arrow and select NETWORK.
4. Press OK.
5. Select WIRELESS and OK.
6. Select SET UP NEW WIFI CONNECTION. Press OK.
7. Message “Looking for wireless network” should appear on screen.
8. Look for the name of your home network on the list.
9. Use the arrows to highlight your home network name.
10. Press OK.
11. Put in your network password. To do this, use the purple arrows to find the letters or numbers in your WIFI network password. If you have a capital letter in your password, press the up arrow symbol before you select the letter. If you make a mistake typing your password, select the x.
12. Once your network password is typed correctly, select CONNECT and OK.

### **Accessing the Services on the Roku**

**Once the connection is made, press the home button on the Roku remote.**

You will have access to the following under the **My Channels** option:

Netflix – movies and tv shows

YouTube – Internet videos

Pandora – streaming music

Vevo – music videos

PBS Kids – children’s programs – requires parent’s email address

Facebook – social network

Plus many more (these are not always free)

- Not all of the selections in this Roku are free. You should never agree to buy or to register for a product.
- Do not attempt to add or remove any channels.
- Other than your home WiFi network name and password, **do not enter** any of your personal account information into any of the channels.

**To select a channel, use the arrows on the Roku remote to highlight your selection and Press OK.**

1. For instance, to select Netflix, use the arrow to highlight Netflix. You can choose Netflix or Kids Netflix and press OK.
2. Use the down arrow on the remote to see the movies or television shows listed by category. Once you have chosen a category, you can browse all titles in that category by using the right and left arrows on the remote.
3. To make a selection, highlight it and press OK.
4. Select Play to view the selection.

**If you want to go back to the Home Screen or you are done watching, press the Home button on the remote.**

**To disconnect the Roku from your TV**

1. Use your TV remote and Select SOURCE or INPUT and change the selection from HDMI to the original setting for TV viewing.
2. Disconnect the Roku streaming stick from the television and remove the USB cord from the power source.

**The items to be returned to the case are:  
Roku Streaming Stick, USB cord, charger, remote, and  
instructions.**